


Punch Block with cable distribution rings Model RPTW-EXT-x


Cable Distribution Rings



RPTW-EXT-D


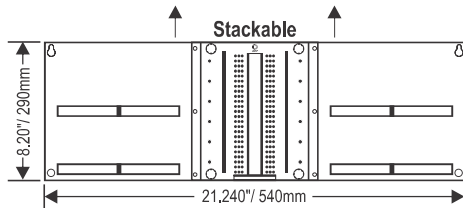


Please see page 22 for
Configuration Options
& Order Information

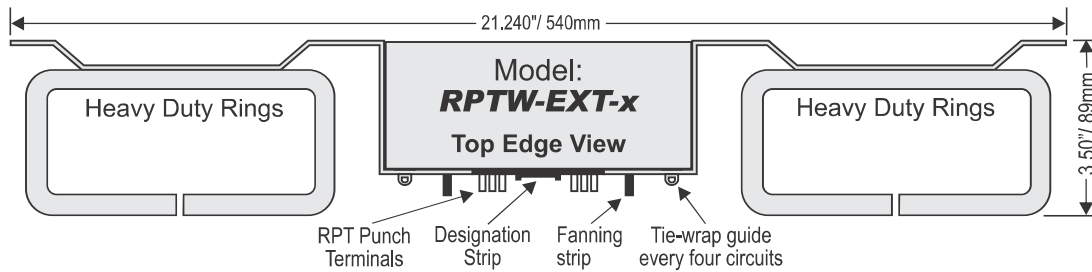

Punch Block with EDAC/ELCO interface Model RPTW-90EL

EDAC/ELCO Interface

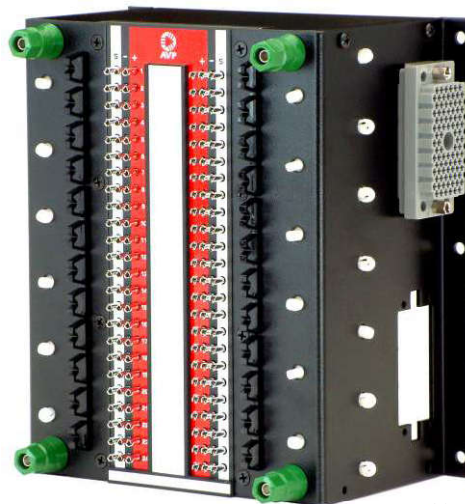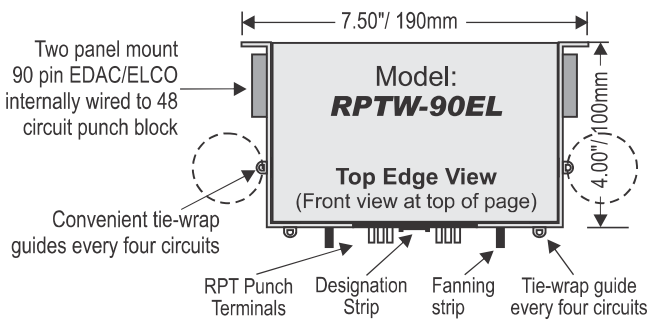

RPTW-90EL

Other connector interfaces are available